



4 x drill points

1. Drill 4 holes into the back of Towel Store as you want them locating.

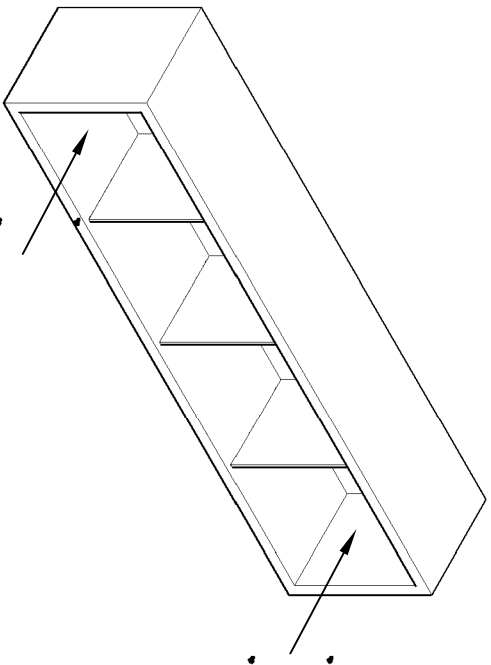

2. Once drilled, place on wall at a suitable height with 4 screws (fixing not supplied—wall dependent)

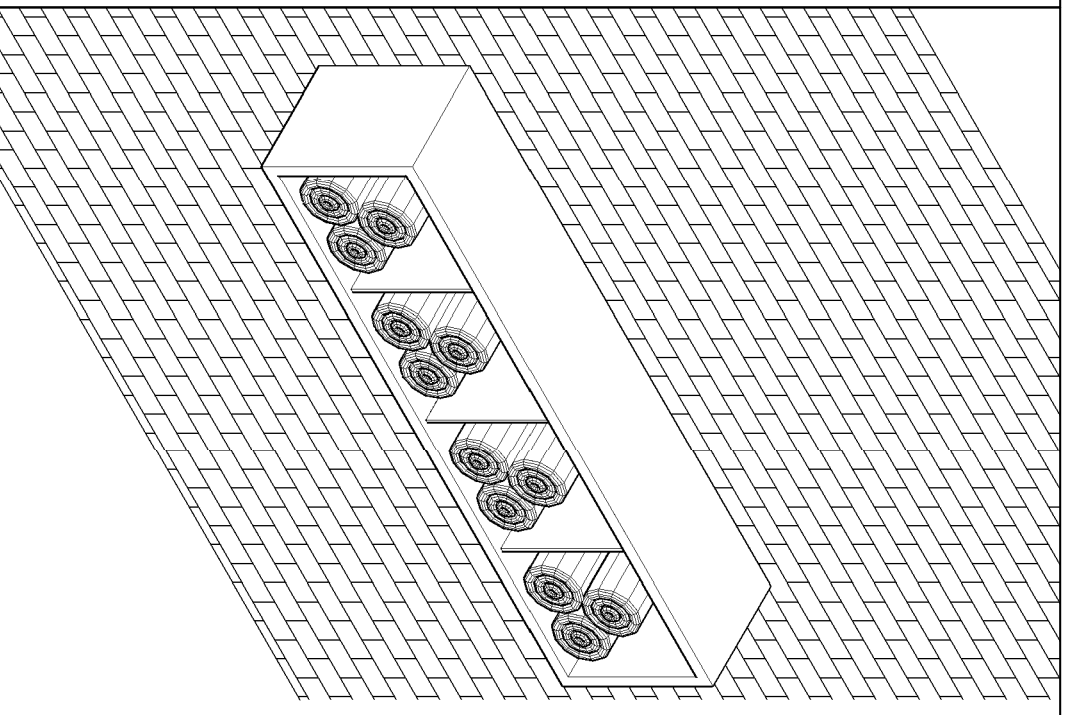

3. Complete

REEM

T: 01282 619977
F: 01282 619617

Horizontal Towel Store
06501

Assembly Instruction Sheet 1/1
Date: 05/08/2009 – Edition 1
Produced by: PP