



1. Mark position of link on wall at 810mm high.
(from Chrome Shelf to Floor.)

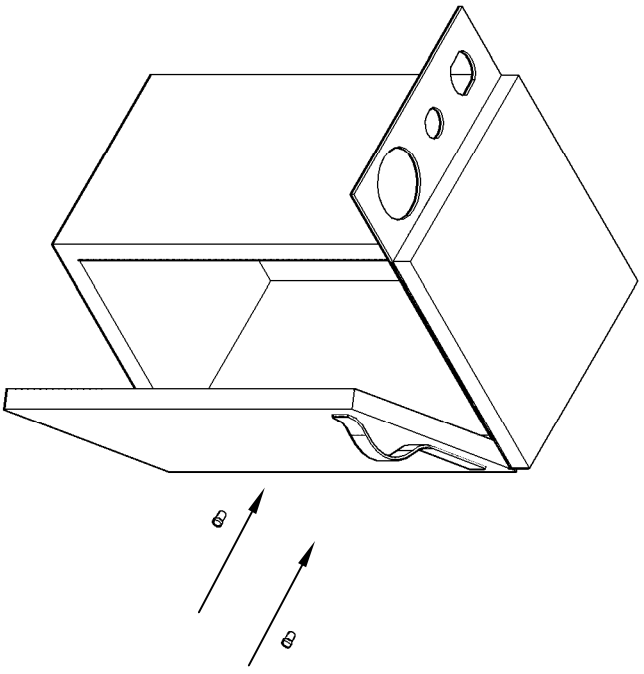

2. Pilot holes through rear of Link Box and fix to wall using suitable fixings (not supplied).

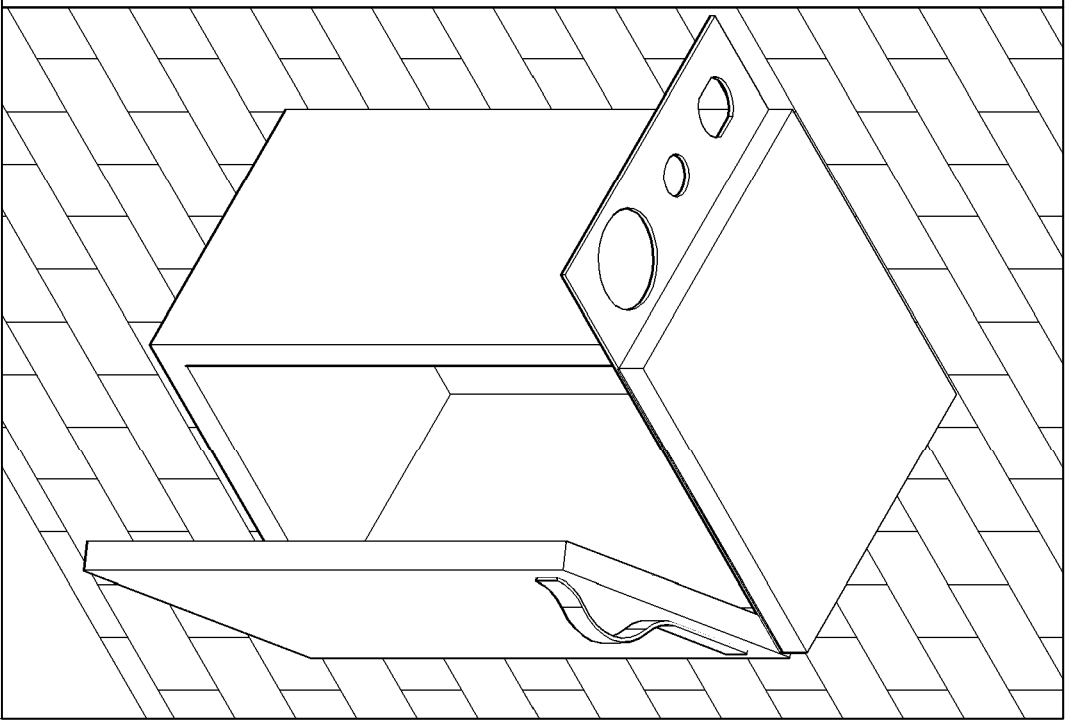

3. Unit Complete

REEM

T: 01282 619977
F: 01282 619617

Universal Wall Link
05175

Assembly Instruction Sheet 1/1
Date: 05/08/2009 – Edition 1
Produced by: PP